


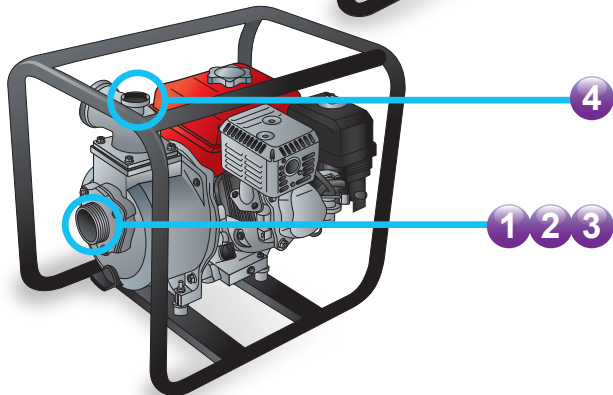


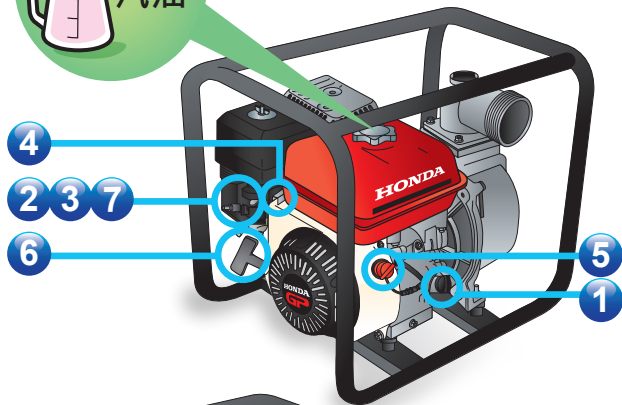

\* 操作引擎之前，請閱讀並理解本使用說明書。

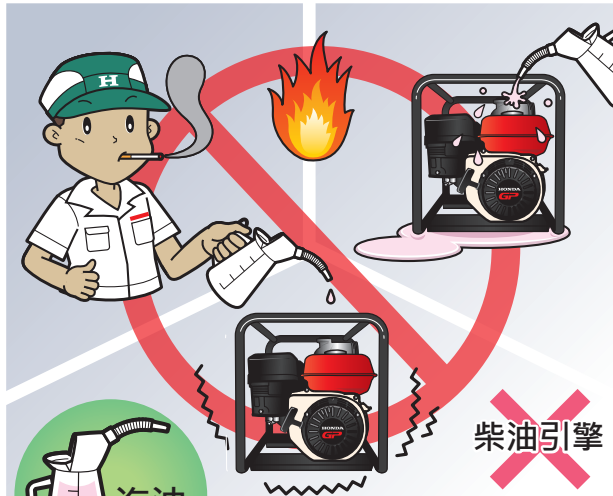





## ▶ 起動前置作業

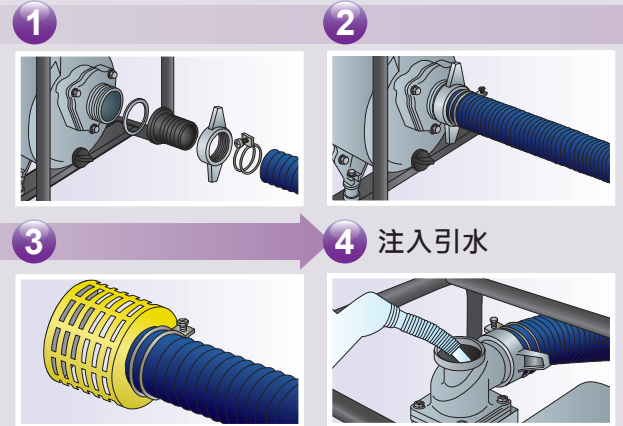

## ▶ 如何熄火 4 → 5 → 2 → A

## ▶ 如何起動

- 1 檢查引擎機油
- 2 燃油栓閥開啟
- 3 阻氣門開 / 關
- 4 節流閥操縱桿

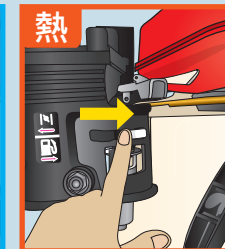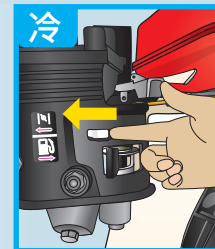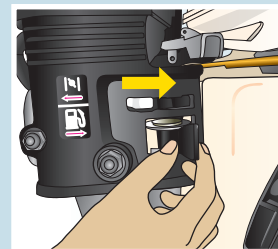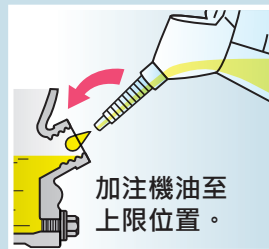

- 5 開啟電源
- 6 起動
- 7 (阻氣門關閉)

